

DIAGNOSTICS PROCEDURE WITHOUT DIAGNOSTIC TROUBLE CODE (DTC)

ABS (DIAGNOSTICS)

R: DTC 32

— ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT RH) —

NOTE:

For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-59, DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

S: DTC 34

— ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (FRONT LH) —

NOTE:

For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-59, DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

T: DTC 36

— ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR RH) —

NOTE:

For the diagnostic procedure, refer to DTC 38. <Ref. to ABS-59, DTC 38 — ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U (REAR LH) —, Diagnostics Procedure without Diagnostic Trouble Code (DTC).>

U: DTC 38

**— ABNORMAL OUTLET SOLENOID VALVE CIRCUIT(S) IN ABSCM&H/U
(REAR LH) —**

DIAGNOSIS:

- Faulty harness/connector
- Faulty outlet solenoid valve in ABSCM&H/U

TROUBLE SYMPTOM:

- ABS does not operate.
- EBD does not operate.


NOTE:

In addition to the ABS warning light, brake warning light illuminates.

DIAGNOSTICS PROCEDURE WITHOUT DIAGNOSTIC TROUBLE CODE (DTC)

ABS (DIAGNOSTICS)

WIRING DIAGRAM:

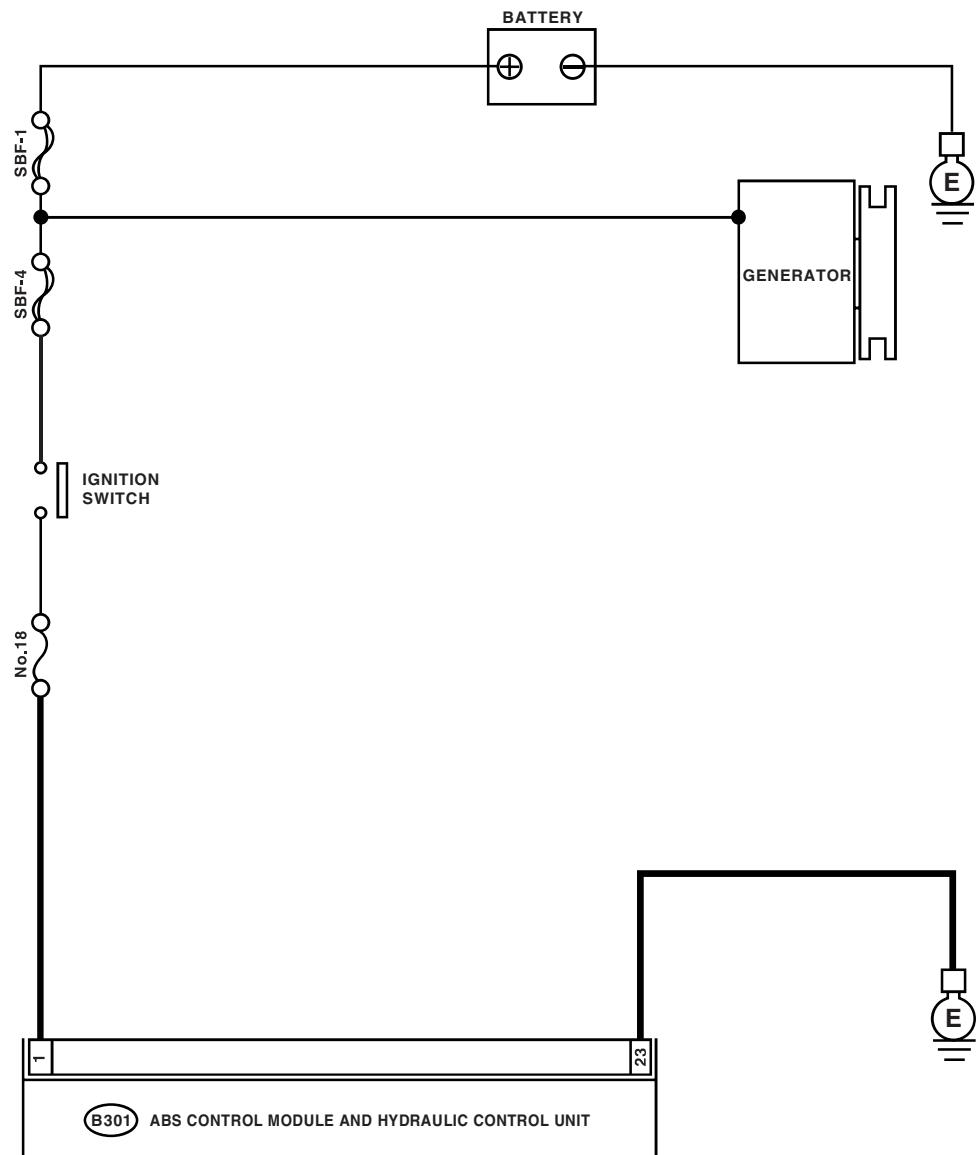

(B301)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26				
27	28	29	30	31										

ABS00121

DIAGNOSTICS PROCEDURE WITHOUT DIAGNOSTIC TROUBLE CODE (DTC) ABS (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK INPUT VOLTAGE OF ABSCM&H/U. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ABSCM&H/U. 3) Run the engine at idle. 4) Measure the voltage between ABSCM&H/U connector and chassis ground. Connector & terminal (B301) No. 1 (+) — Chassis ground (-):	Is the voltage 10 — 15 V?	Go to step 2.	Repair the power supply circuit and ABSCM&H/U.
2 CHECK GROUND CIRCUIT OF ABSCM&H/U. 1) Turn the ignition switch to OFF. 2) Measure the resistance between ABSCM&H/U connector and chassis ground. Connector & terminal (B301) No. 23 — Chassis ground:	Is the resistance less than 0.5 Ω ?	Go to step 3.	Repair the ABSCM&H/U ground harness.
3 CHECK POOR CONTACT IN CONNECTORS.	Is there poor contact in connectors among generator, battery and ABSCM&H/U?	Repair the connector.	Go to step 4.
4 CHECK ABSCM&H/U. 1) Connect all connectors. 2) Erase the memory. 3) Perform the inspection mode. 4) Read out the DTC.	Is the same DTC as in the current diagnosis still being output?	Replace the ABSCM&H/U. <Ref. to ABS-7, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).>	Go to step 5.
5 CHECK ANY OTHER DIAGNOSTIC TROUBLE CODES (DTCs) APPEARANCE.	Are other DTCs being output?	Proceed with the diagnosis corresponding to DTC.	A temporary poor contact.